

BC Scale Menu				Options			
Home	INFO	Model		Status: Model, SN #, SW #, Checksum			
		Cal Info		Status: Geo Code Calib, Cal Wt, Geo Code Loc, # Cycles			
		WT Info		Status: Capacity, Increment, Range, Min wt			
		Working Time		Status: Power on Time, > 25% capacity, >50% capacity			
		BlueTooth		Status: Address, Name			
		Scale Errors		Status: Last 5 - Error Log			
		Help		Status: Website, Tech Support			
		Defaults		Toledo, Def F, Def F2, Def U, Def P, Tol OM, SICS, Custom			
		Oper Mode	Wt + Tare	Disable			
				Enable		Auto Clear, Keypad clear	
Hold	Disable						
	Enable		Stable Time	0.5s, 1.0s, 1.5s, 2.0s			
Label Offset	Disable						
	Enable		Auto Clear, Keypad clear				
Take Away			Disable, Enable				
Price			Disable, Enable				
Count	Disable						
	Enable		Ave WT : 10, 20, 50, 100				
Prod Ver		Disable, Enable					
Set Up	Display	Language		English, French, German, Spanish, Chinese			
		Filter		Disable, Light, Heavy			
		PB Feedback		Disable, Enable			
		Logo	Disable				
			Screen Saver		1 min, 5 min, 10 min		
		Custom Msg		Disable, Enable			
		Password	Disable		Confirmation to disable		
			Set PWD		Enter Keystrokes, Confirm PWD, Confirm Change		
		Communication	Serial	Baud		1200, 2400, 4800, 9600, 19200, 38400, 57600	
				Ascii Data Bit		7, 8	
	Parity			Space, Mark, Odd, Even, None			
	Stop			1, 2			
	USB		Protocol		Disable, Toledo, MT-SICS, Proto F, Proto U, Proto P		
			HIDPOS				
			Virtual Serial				
			KB Wedge		None, CR, TAB		
	PB HID						
	BlueTooth		Disable, Enable				
	Ethernet		Address, MAC, ETC				
	Send WT	Disable					
		Send Key					
		Auto Send		No Delay, 0.5s, 1.0s, 1.5s, 2.0s			
		Continuous		0.1s, 0.2s, 0.5s, 1.0s, 1.5s			
	Scale	Metro Lock		Disable, Enable			
		Type Approved		No, HB44, OIML			
		Set Def Build		No, Yes			
		Capacity-incr	Primary	Prim Units		Lb-lb, lb-oz, kg, g	
				Pr Range		Single, MR2, MR3, MI2, MI3 (MR = Multi-Range, MI= Multi-interval)	
				Pr Capacity		Per Range: Set Capacity and Increment	
				Over Cap -d		5d, 9d, 12d	
				Min Weight		5d, 10d, 20d	
				Unit Switch		Disable, Enable	
		Secondary Units		Lb-lb, lb-oz, kg, g			
		Calibration	Cal Weight	Pound		4 options per scale model BC30 = 10,25,50,100 lb	
				Metric		4 options per scale model BC30 = 5, 10, 20, 30 kg	
			Calib	Geo Calib		enter 00-31	
				Calib		Zero capture, span capture	
		Exit					
		USE GEO		enter 00-31			
		CAL Prompt		Disable, 5k wt, 10k wt, 50k wt, 100k wt			
Zero		PB 0	> 0 <		Disable, 2%, 5%, 100%		
			AZM		Disable, Enable		
			PowerUp 0		Disable, 10%, 20%		
	Rounding		Classifier, Normal, USPS, Expand, Factory				
Functions	Wt + Tare		Disable, Enable				
	Label Offset		Disable, Enable				
	Take Away		Disable, Enable				
	Prod Ver		Disable, Enable				
	Count		Disable, Enable				
	Price		Disable, Enable				
	Hold		Disable, Enable				
Bootup		Disable, GEO, G+M, G+L, G+M+L (G=Geo, L=Language/units, M=SW)					
Maintenance	Overloads		Status : # counts, Time, Date				
	Display Test		Test				
	Cal Check		Test: Zero, Cal Wt - Place wt				
End	Abort		Confirm - no save				
	SAVE		Confirm - Save				
	No		Go Back to Set up				
	Custom Default		Save for HOME > Default > Custom				